

Instructions

e4fun Balance Board



Before operating this vehicle, read all the instructions for safe assembly and operations. User's manual can guide you through the functions and usage of Balance Board. Before using this board, familiarize yourself with how to operate, so that you can keep the board in the best condition possible.

1. General information

a) The risk of driving

- Learn how to drive safely before you drive fast on the board.
- Failing, losing control, crashing, including violating the rules in the user's manual can lead to injury.
- Speed and range may differ based on rider weight, terrain, temperature, and driving style.
- Make sure to wear helmet and protective clothing before using the board.
- Make sure to read the manual carefully before using the board.
- Only for use in dry weather.
- We do not recommend the use of any balance boards on public roads
- Be aware of all laws applicable to this type of Balance Board in your country. In many countries it is not allowed to drive the Balance Board on public roads or in public places, but only in non-public places. It is your responsibility to know and comply with all regulations. If there are no regulations for this Balance Board in your country, be aware of your own safety and the safety of others.

b) Preparation

- Before using, the battery should be fully charged. *Please check 6. Charging the Balance Board*

c) Weight limitation


- If the motor of the Balance Board is overstrained, e.g. due to driving on steep slopes, deep pits or due to overweight of the rider, this can lead to heating of the motor. This does not constitute a warranty claim.
- The safety of the driver is only guaranteed if the weight limit is not exceeded.

Maximum load: 120kg

Minimum load: 20 kg

2. Operating the Balance Board

a) Overview

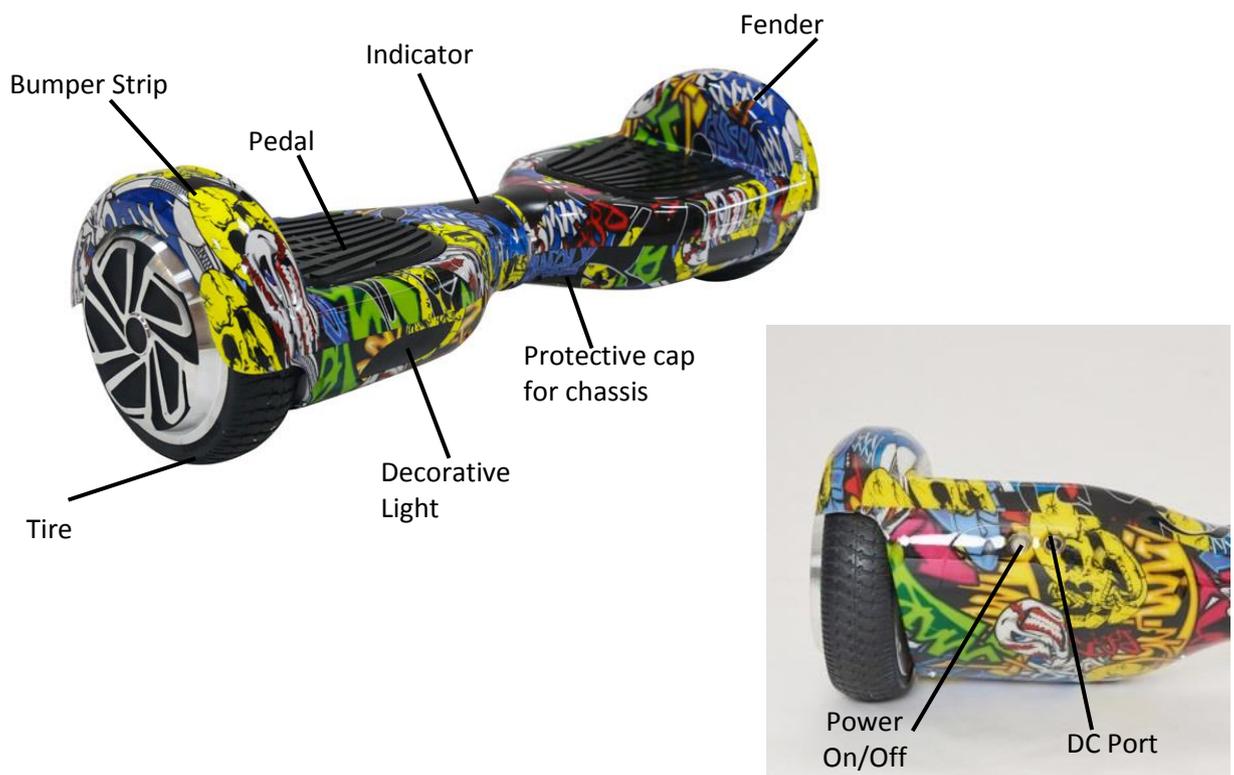

b) Calibration


If your board seems to pull to the left or right, you may need to recalibrate its sensors. Step as below:

1. Shut down/level the board
2. Press the Power button for more than 10 seconds until you see the light flashing 5 times.
3. Shutdown board again.
4. Power on, finished calibration.

c) Operating principal

- Balancing board uses Dynamic equilibrium, using internal gyroscope and acceleration sensors. The status of the board is controlled by the center-of gravity. It is adjusted by motor, which is controlled by the servo control system. When you lean forward, it will sense your actions to accelerate. When you need to turn, slow it down and move your foot forwards or backwards then the center-of gravity of the body moves left or right therefore the board can sense moving left or right.

- Balance board has inertial dynamic stabilization system, so it can keep anterior-posterior balance but cannot guarantee the left and right. So when turning, the board needs to be operated slowing, otherwise, you may be injured.

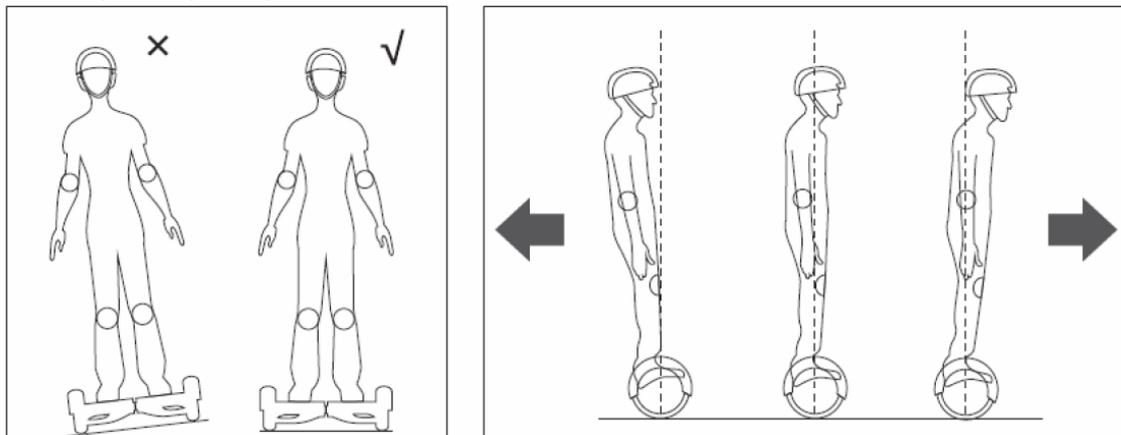


d) Learn how to use it

1. Press the power button to turn on the board.
2. Put the board on a flat ground and make sure all safety measures are taken. Put one foot on the pad that will trigger the pedal switch to turn on the operation indicator, after the system enters the selfbalancing mode, put the other foot on the pad.
3. Take control of the boards forwards or backwards, do remember the movement of your body should not be abrupt.

!! ATTENTION!!

If you are not in a balanced condition when you trigger the foot-switch, the buzzer will alarm, and the warning LED will light. The system is not in a self-balanced condition. Without a balanced condition, you should not operate the board. Then you need to **calibrate** the sensors, see **point 2.b**.

4. Control the left and right direction of the board.
5. Before you get off, make sure that the board is still in balanced condition and stopped, then step off one foot, then the other foot.

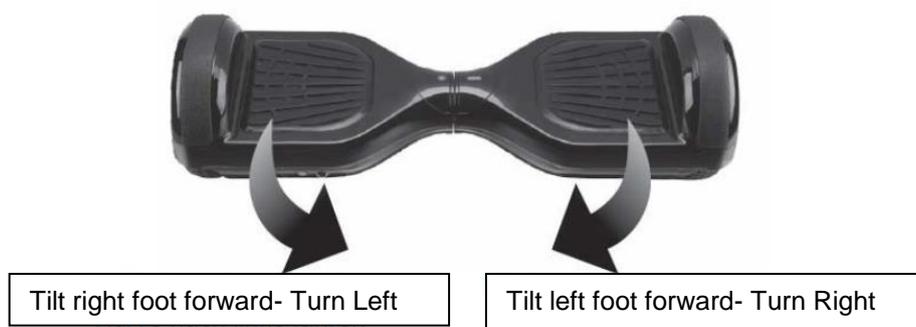

!! Warning notice!!

You should never turn violently when driving fast.

You should never ride sideways or turn on a slope. It will lead to a fall and injury.

e) Always react on alarms

Board will not operate in the following situations:

- During operation, if the system runs an error, the board will prompt operators in different ways such as prohibit riding, alarm indicator lights, buzzer alarm beeps intermittently the system cannot enter selfbalancing mode.
- When stepping on the board the platform moves forwards or backwards more than 10 degrees, the unit will not operate.
- The voltage of the battery is too low.
- During charging.
- During operation, the platform turns upside down will prohibit operation.
- Over speeding.
- The battery is not charged enough.
- Tire stall, two seconds later the board enters power off mode.
- The battery voltage is lower than the protection value, 15 seconds later the balance board enters into power off mode.
- Continuing large current discharge (such as a long-time climbing a very steep slope)

!! Warning notice!!

When the board enters into the shutdown state (when the battery is low), the system will lock down the machine automatically. It can be unlocked when you press the power button. When the battery has been depleted or the system gives out information with safety shutdown, please do not continue to drive the board, otherwise, the board cannot balance for the lack of battery. In this condition, the driver is likely to be harmed. If the battery reaches the minimum, the continued driving of the board will negatively affect the battery's life.

The product should only be used in temperatures between -10°C - +45°C.

f) Riding practice

Before you drive the board, please make sure you are familiar with the skills of driving it. Always practice with someone ready to hold/catch you.

- Use casual (but not loose) clothes and flat shoes in order to retain your body's flexibility.
- Please go to open spaces to practice driving the board until you can easily get on and get off.
- Make sure that the surface is level.
- When you are driving on different terrain, you must slow down.
- Balance Board is a driving tool designed for a smooth road. Reduce speed if you drive the board on a rough surface.

3. Pedal Sensor and Indicator operation

a) Pedal sensor


Balance Board has 4 sensors below the pedal, when the operator steps on the pedal, the board will adjust itself to a balancing pattern automatically. When riding it, you have to make sure that the pedal is being fully stepped on, please do not step on the parts outside the pedal. Do not put things on the pedals to make the board operate by itself and increase the possibility of crashing and even cause personal injury and damage to the board itself.

b) Battery & Operation Indicators

The indicator is located in the middle of the board. It is used for operation information.

- Battery indicator on the Balance Board will show green color as long as there is sufficient power on the battery to drive.
- Battery indicator on the Balance Board will show red color when battery power is down (15-20% left) and you will need to stop driving and start to recharge the Balance Board.
- Battery indicator on the Balance Board will show RED and have WARNING ALARM SOUND when battery power has run out and you must stop driving immediately. The Balance Board will now shut down without further notice and the Balance Board will then lose balance. You may have risk to get injured if still try to keep driving.

- Operation indicator: When the pedal is triggered, the operation indicator will light then the system comes into operating condition; when the system runs an error, the indicator will turn red.

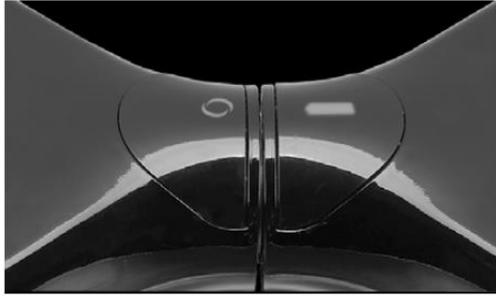

4. Range and speed

a) Range per charge

The range per charge is related to many factors, for example:

- Topography: On even roads the range per charge will be increased, on uneven terrain, it will be decreased.
- Weight: The weight of the operator can influence the driving distance.
- Temperature: Extreme temperature will decrease the driving distance.
- Maintenance: If the board is charged properly and the battery is kept in good condition, this will maximize the driving distance.
- Speed and driving style: Keeping a steady speed will increase the driving distance, on the contrary, frequent start, stop, acceleration, deceleration will reduce the distance.

b) Max. Speed

- The maximum speed of the balance board is rated at 12km/h but depends on the charging condition of the battery, the condition/angle of the surface, wind direction, and the driver's weight. If the battery is fully charged, the surface is very level or even angled downward, there is a tailwind, and the driver is not very heavy, the maximum speed may exceed 12km/h.
- Approaching its maximum speed, the balance board emits a warning signal, and speed should be reduced.
- We recommend driving the balance board at speeds that are comfortable to you and not driving the balance board at speeds exceeding 12km/h.
- In the permissive speed, the electric board can balance itself well.

5. Safe driving

This chapter will focus on safety, knowledge and warnings. Before operating this vehicle, read all the instructions for safe assembly and operation.

!! Warning notice!!

- Before starting, familiarize yourself with how to operate, so that you can keep the board in the best condition.
- When you are driving the board, make sure that all safety measures are taken. You should be wearing a helmet, knee pads, elbow pads and other protective gear.
- The driver should not wear loose or hanging clothing, shoelaces, etc. that can get caught in the wheels of the Balance board.
- Balance board is only for personal entertainment. You are not allowed to ride it on public streets.
- Balance board is not allowed on the motor vehicle lanes.
- Children, the elderly, pregnant women are not allowed to drive.
- Persons with reduced balancing capacity should not drive the balance board.
- Do not drive the balance board under the influence of alcohol or any other substance.
- Do not carry items when driving.
- Please be alert to things in front of you, maintaining good vision will help you drive the board safely.
- Relax your legs while driving, knees slightly bent, it can help maintain balance when encountering uneven ground.

- In the process of driving, make sure that your feet are always stepping on the pedals.
- Balance board can only carry one person.
- Do not start or stop suddenly.
- Avoid driving on steep slopes.
- Do not drive the balance board up against a fixed object (f.inst. a wall or other structure) and continue driving the balance board.
- Do not drive in dimly lit or dark places.
- Driving the Balance board is at your own risk and the company is not responsible for any accidents or damage you may cause.
- Ensure the vehicle speed is safe to yourself and others, and be ready to stop at any time when operating.
- When you are driving the board, please keep a certain distance from each other to avoid collisions.
- When steering you should use your body's center of gravity, the violent shift of center of gravity may cause you to wreck or fall off the board.
- Do not drive backwards for long distances, drive backwards at high speeds, turn at high speeds and drive too fast.
- Do not drive when raining or expose the board to other wet conditions. Only to be driven in dry weather.
- Avoid driving on obstacles and avoid snow, ice, and slippery surfaces.
- Avoid driving on items made of cloth, small branches and stones.
- Avoid driving in narrow spaces or where there is an obstacle.
- Jumping on or off the board can and will cause damage that is not covered by warranty. Risk of personal injury. Personal damage or abuse related to "trick riding" is not covered by the company and voids any warranty.

6. Charging the Balance Board

This chapter mainly discusses the charging methods, how to maintain the battery, the safety issues you need to pay attention to, and battery specifications. For safety of yourself and others, and extend the battery's life and improve battery performance, please make sure to follow the following operations.

a) Low battery

6.1. Low battery

When you find the battery indicator is red and flashing, it indicates low battery. It is recommended that you stop driving. When the power is low, there is not enough energy for your normal driving, then the system will automatically tilt the base of the platform to prohibit the operator's use. It is very easy to fall if you insist on driving at this time, and negatively affect battery's life.

- Do not use the battery in the following cases.
- Giving out some odor or excessive heat.
- Leakage of any substance.
- It is prohibited to disassemble the battery.
- Do not touch any substance leaking out of the battery.
- Do not let children and animals touch the battery.
- Batteries contain dangerous substances inside. It is forbidden to open the battery and to stick objects into the battery.
- Use only the supplied charger.
- Don't over charge lithium batteries. The battery pack consists of lithium batteries.

!! Warning notice!!

When you find the battery indicator is red and flashing, it indicates low battery. It is recommended that you stop driving and recharge the board. When the battery is low, there is not enough power for normal driving. The operational system of the board will automatically tilt the platform forward to prohibit use. This could cause the driver to fall off the board and become injured.

!! ATTENTION!!

- When charging do not ride the Balance Board!
- When charging ongoing then the LED light of the battery charger is red colour.
- When charging is finished then LED light of the battery charger turns into green colour.
- When charging is finished unplug the battery charger from the mains power supply and from the balance board.

b) Charging

- Only use the DC connector to connect with the DC cable from the charger that comes with the balance board!
- Do not insert any foreign objects into DC connector!
- Risk of arcing! Never bridge the DC charging socket with metal objects!
- Always keep the protective cap plugged onto the DC connector!
- Only take off the cap when charging the balance board.
- After charging finished take out the DC plug and put on the protective cap onto the DC connector again!
- Make sure that the balance board, the charger and the DC power socket on the balance board are kept dry.
- Note: ONLY use the supplied charger labelled JY-420150 with the following output voltage to charge this balance board: 42V - 1.5A.
- Using another charger may damage the product or create other potential risks.
- Plug the power adapter into the DC power port on the back of the board and a standard power outlet. Make sure the green indicator on the adaptor lights up.
- When the red indicator lights on the charger indicate charging properly, otherwise check if the line is connected properly.
- When the indicator light on the charger changes from red to green, this indicates that the battery is fully charged.
- In this case, please stop charging. Over charging will affect the battery life.
- Charging may take up to - 4 hours. Do not charge the battery for more than 4 hours. Disconnect the charger from the balance board and the power supply after 4 hours. Overcharging will reduce the lifetime of the battery.
- The product should not be charged over longer periods.
- Never charge the product without supervision.
- The product should only be charged in temperatures between 0°C - +45°C.
- If charging at lower or higher temperatures, there is a risk that the performance of the battery will be reduced and a potential risk of damage to the product and personal injury.
- Charge only under supervision and place batteries on a non-flammable base, away from any flammable materials, fire or warm objects.
- Do not charge in sunlight or near open fire.
- Do not charge the product immediately after use. Let the product cool down for one hour before charging.
- If the product is left with other persons for example during a holiday period, it should be partially charged (20-50% charged). Not fully charged.
- Do not remove the product from the packaging, charge it fully and then put it back into the packaging.
- When shipped from the factory, the product has often been partially charged. Keep the product in a partially charged state, until it is going to be used.

7. The maintenance of the electric board

Balance board needs to be maintained. This chapter mainly describes the relevant steps and important operation reminders to maintain it. Please make sure that the power and charge coil are off before you do the following operation. You should not operate when the battery is charging.

a) Cleaning

- Make sure the power and the charge coil are off.
- Wipe the shell of electric scooter with soft cloth.

!! Warning notice!!

- Make sure that water and other liquids do not enter the internal parts of the balance scooter as this may permanently damage the electronics/batteries of the scooter. There is a risk of personal injury.

b) Storage

- If the storage temperature is below 0°C, please do not charge the scooter. You can place it in a warm environment (5-30°C) for charging.
- You can cover the scooter, in order to prevent dust.
- Store the scooter indoors put it in a place with a dry and suitable environment.
- If used at lower or higher temperatures, there is a risk that the performance of the battery will be reduced and a potential risk of damage to the product and personal injury.
- Store the product at temperatures between 5°C - 30°C. (optimum storage temperature is 25°C)
- Charge and store the product in an open, dry area and away from flammable materials (i.e. materials that may burst into flames).

- Do not store the product in sunlight or near open fire.
- If the product is left with other persons for example during a holiday period, it should be partially charged (20-50% charged). Not fully charged.
- Do not remove the product from the packaging, char
- The Balance Scooter must cool down for at least 1 hour before being packed.
- Must not be left inside a warm car sitting in the sun.

!! Warning notice!!

- To protect user safety, users are forbidden to open the scooter, or you give up your warranty rights.

8. Disposal of an e4fun product

Dispose of your e4fun product exclusively via approved collection points! To protect the environment, do NOT dispose of your e4fun product and batteries in the normal household waste bin. Dispose of batteries and your e4fun product separately!

Information for battery disposal:

In connection with the sale of batteries or with the delivery of devices that contain batteries, we are under obligation to bring the following to your attention: As the end user, you are legally under obligation to return used batteries. You can return old batteries, which we offer or have offered in our new battery assortment, free of charge to our dispatch warehouse (dispatch address). The symbols showed on the batteries have the following meaning: The symbol of the crossed-out dustbin means that the battery may not be discarded with the household waste. Das Symbol der durchgekreuzten Mülltonne bedeutet, dass die Batterie nicht in den Hausmüll gegeben werden darf.

Pb = Battery contains more than 0.004 percent by mass of Lead

Cd = Battery contains more than 0.002 percent by mass of Cadmium

Hg = Battery contains more than 0.0005 percent by mass of Mercury.

Please pay attention to the above instructions.

